

BECK

INSTRUCTION MANUAL



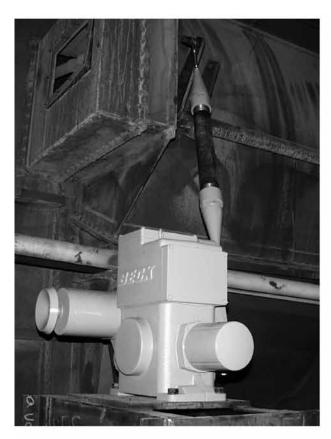

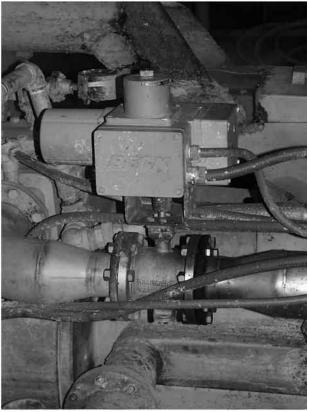



DCM-2 LOCAL INTERFACE Troubleshooting

